

**INSTRUCTION MANUAL
FOR
REGULATED POWER SUPPLIES**

LLS-6000 SERIES

This manual provides instructions intended for the operation of Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics. All information contained herein applies to all LLS-6000 series models unless otherwise specified.

LAMBDA ELECTRONICS

MAIN PLANT TELEPHONE: (516) 694-4200

MELVILLE, N.Y.

IM-LLS-6000